



TAMCO
Metal Eave Closure Installation
Capistrano

1. Cut first closure for desired starting point and install.

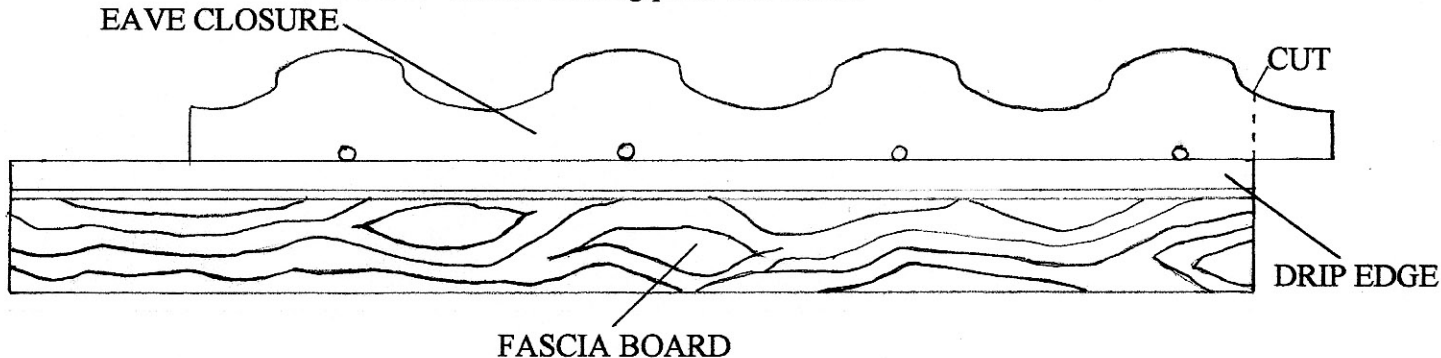

2. Closure overlaps approximately 1". Measure to next pattern then secure.
Measurement same distance as between patterns on solid piece.

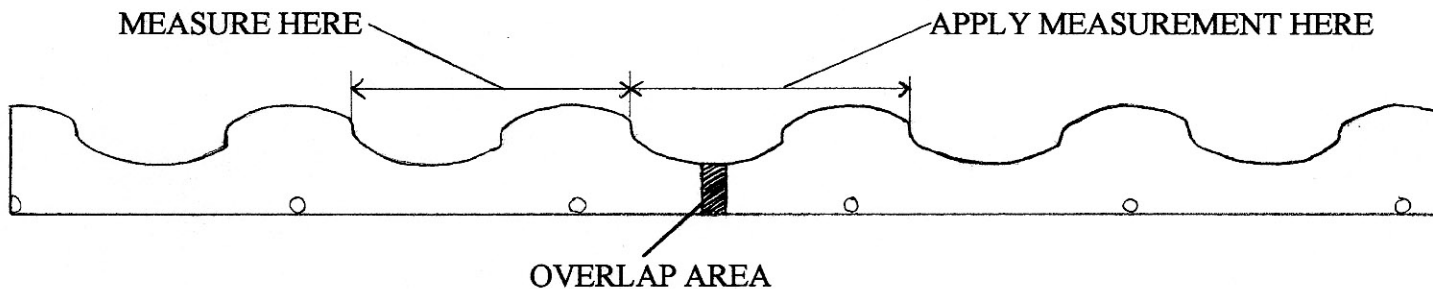

3. Tile has well defined narrow groove in which closure is designed too lay.