



TAMCO
Metal Eave Closure Installation
Malibu

1. Cut first closure for desired starting point and install.

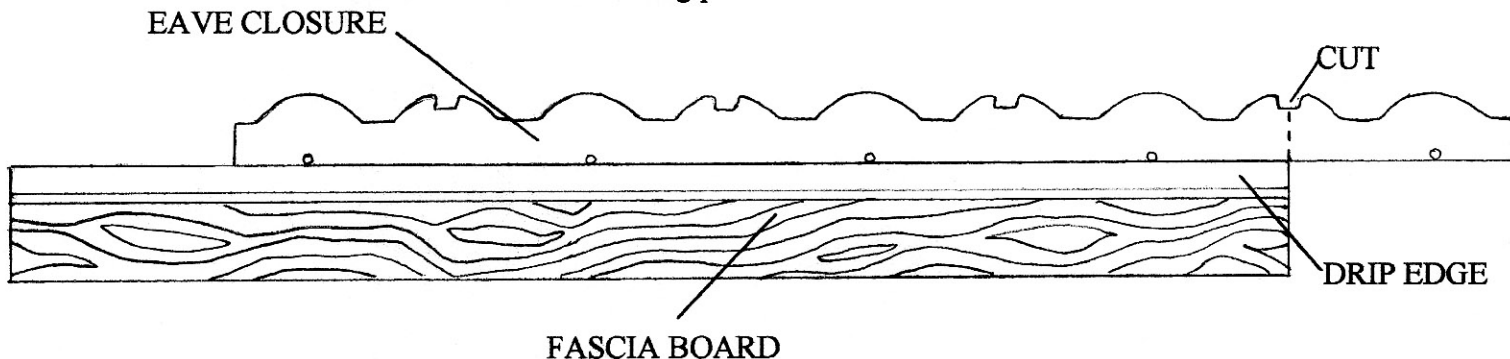

2. Closure overlaps approximately 1". Measure to next pattern then secure.
Measurement same distance as between patterns on solid piece.

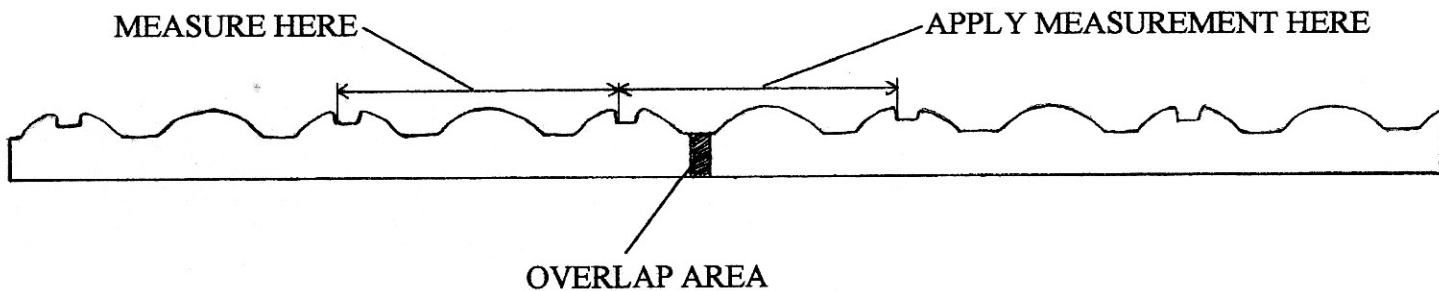

3. Tile sets on closure between the two ridges on tile bottom. Slide tile back until stopped by front ridge.