



TAMCO  
Metal Eave Closure Installation  
Mediterra

1. Cut first closure for desired starting point and install.

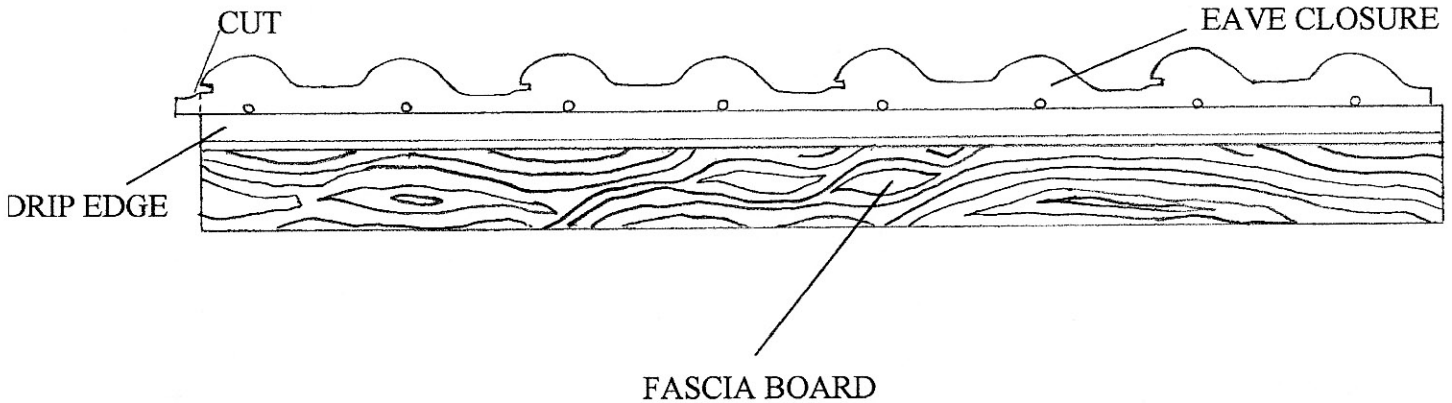

2. Closure overlaps approximately 3/4". Measure to next pattern then secure. Measurement same distance as between patterns on solid piece.

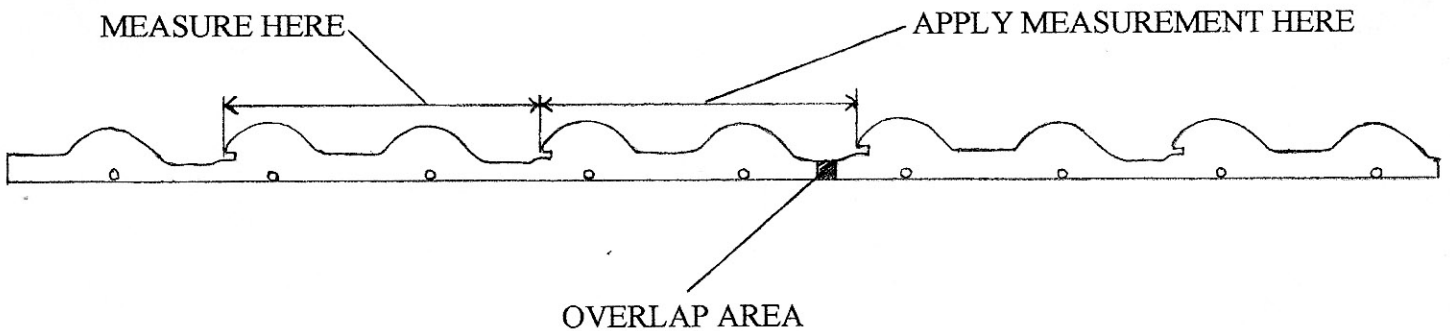

3. Tile overhang is measured to 3/4". There are no grooves or ridges that determine tile positioning.