



**TAMCO**  
**Metal Eave Closure Installation**  
**PALEMA/ESTATE-S**

1. Cut first closure for desired starting point and install.

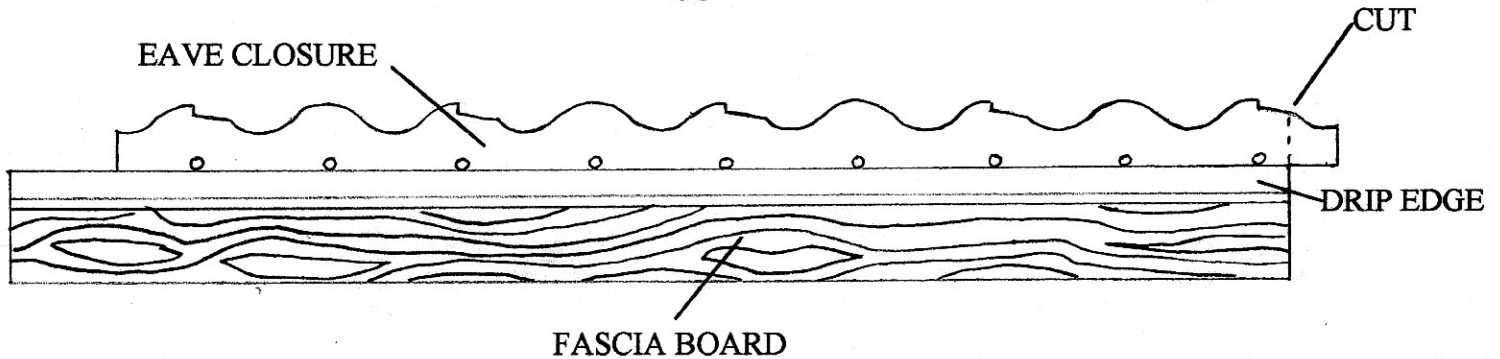

2. Closure overlaps approximately 1". Measure to next pattern then secure.  
Measurement same distance as between patterns on solid piece.

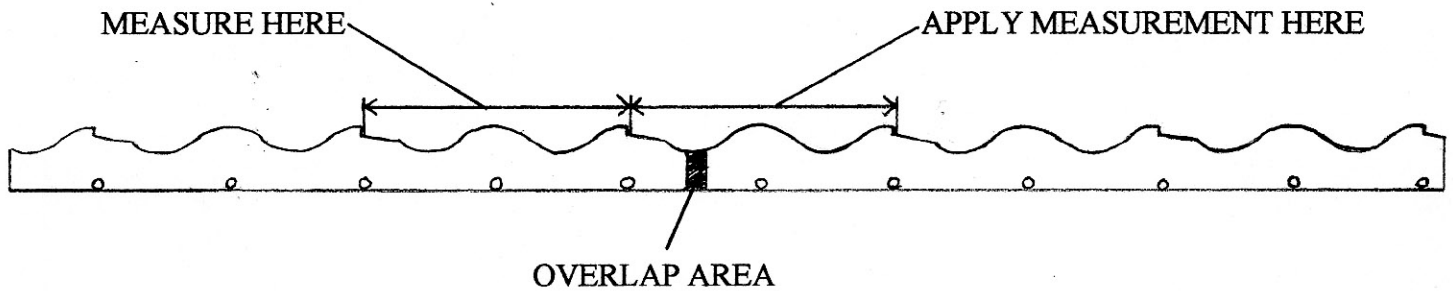

3. Tile rests on riser behind second ridge. Not designed to fit groove between first and second ridges.