



TAMCO
Metal Eave Closure Installation
SantaFe-Spanish

1. Cut first closure for desired starting point and install.

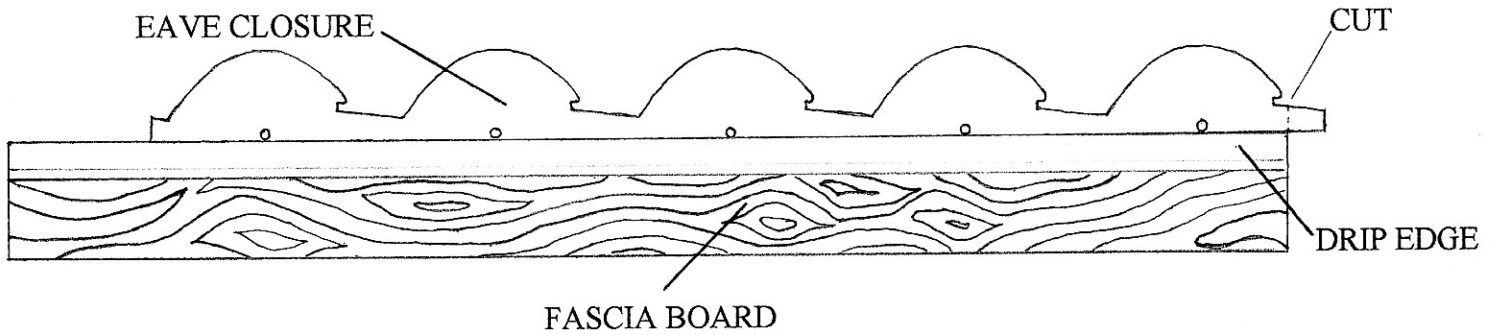

2. Closure overlaps approximately 1". Measure to next pattern then secure. Measurement same distance as between patterns on solid piece.

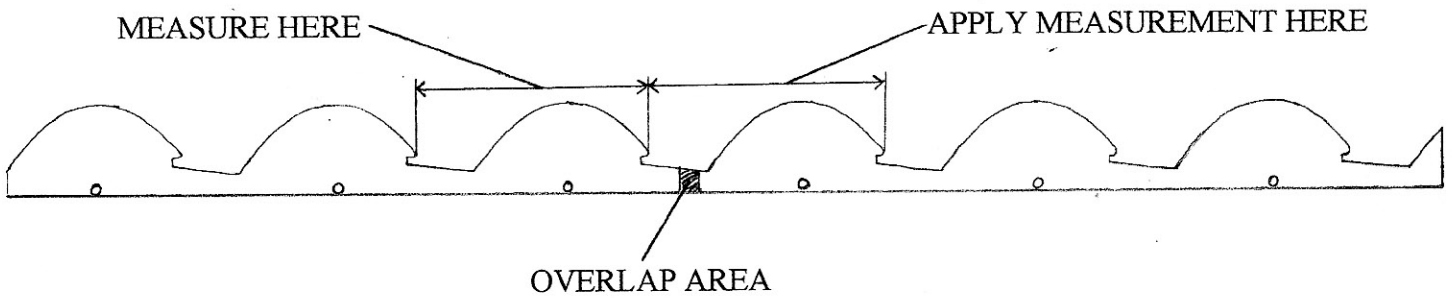

3. Tile overhang is measured to 1". There are no grooves or ridges that determine Tile positioning.