



TAMCO
Metal Eave Closure Installation
Spanish-S

1. Cut first closure for desired starting point and install.

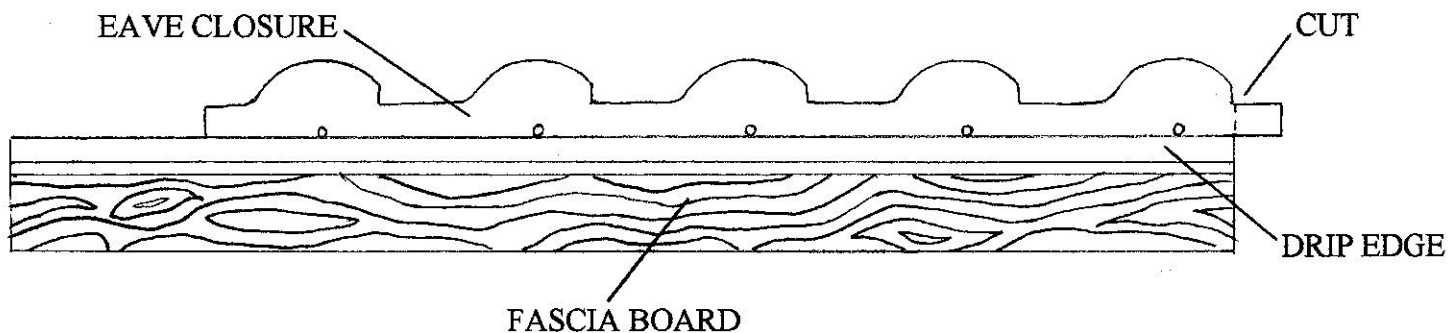

2. Closure overlaps approximately 1". Measure to next pattern then secure.
Measurement same distance as between patterns on solid piece.

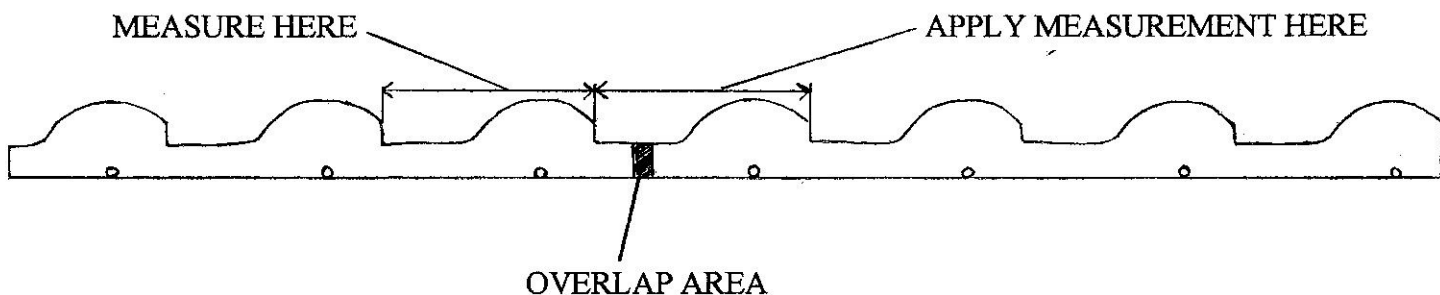

3. Tile rests on riser at only bottom recess located approximately 1" back from tile front edge.