



TAMCO  
Metal Eave Closure Installation  
Villa-900

1. Cut first closure for desired starting point and install.  
EAVE CLOSURE

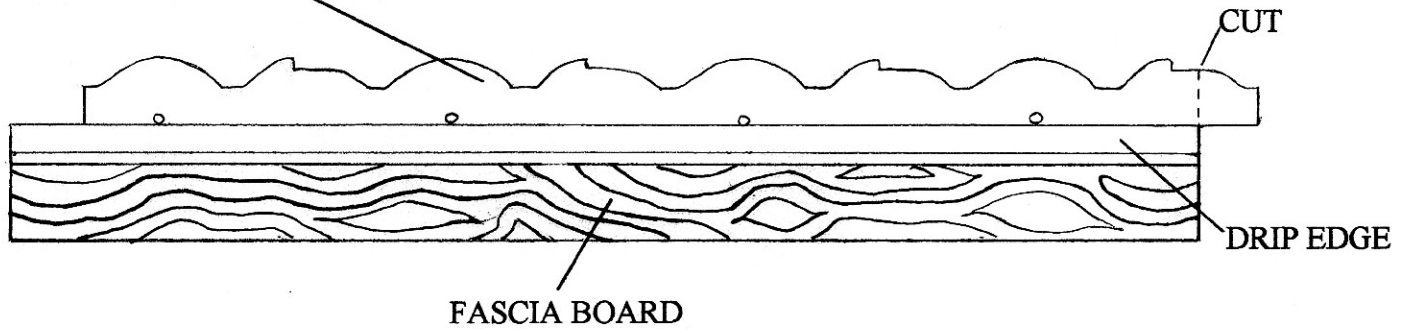

2. Closure overlaps approximately 1". Measure to next pattern then secure.  
Measurement same distance as between patterns on solid piece.

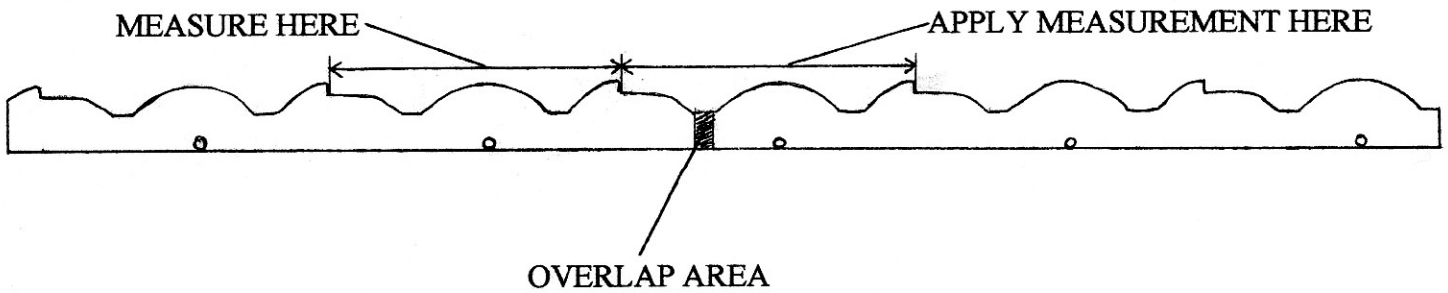

3. Tile has well defined recess in which closure is designed too lay.